




Asus Zenbook UX32VD RAM Replacement

Instructions on replacing the RAM within the Asus Zenbook UX32VD.

Written By: Paola

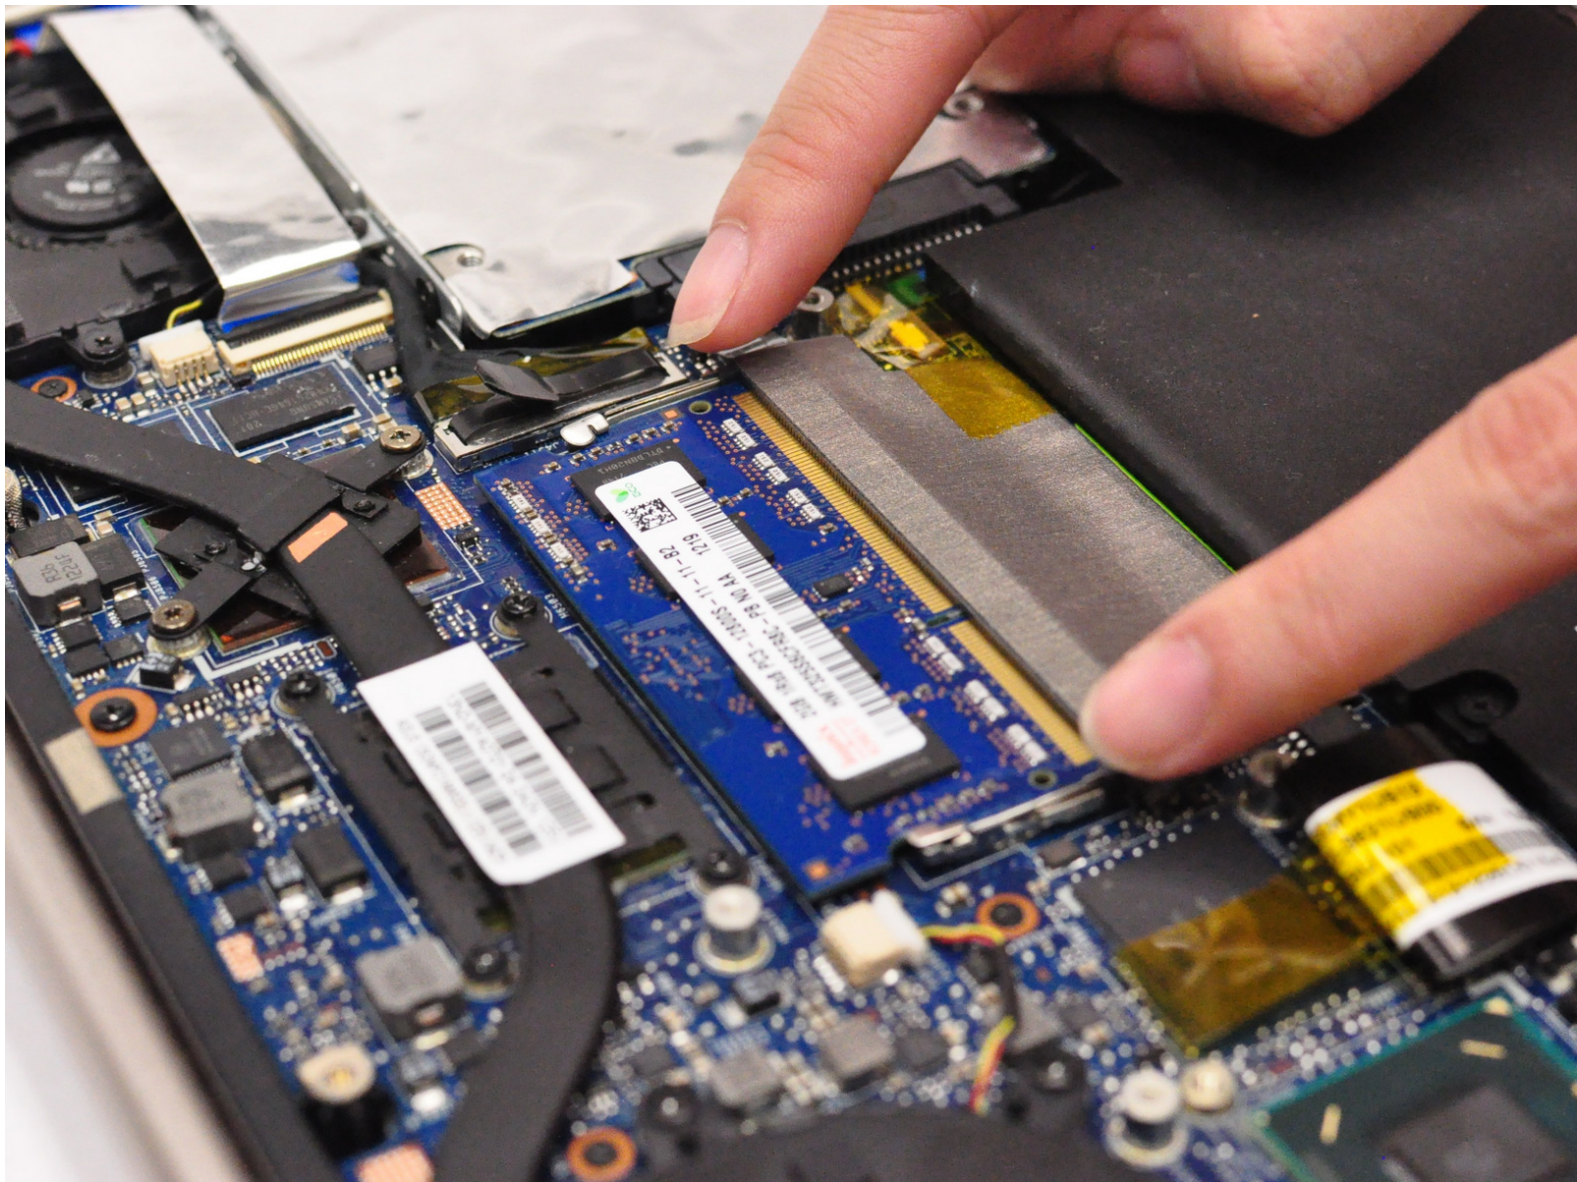

INTRODUCTION



Upgrade the RAM in your laptop.



TOOLS:


- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bottom Panel

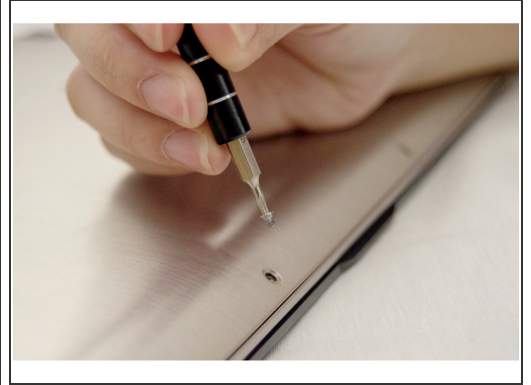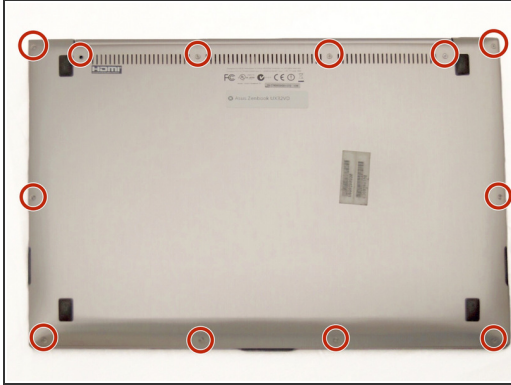


- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

Step 2

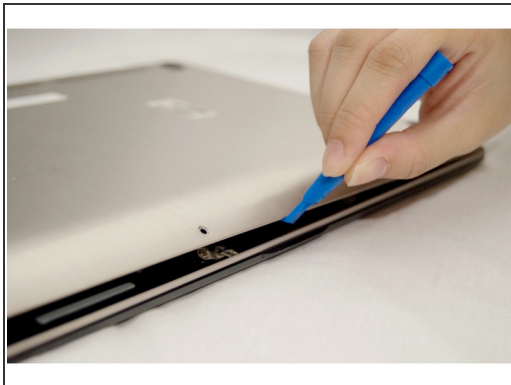

- Use a [plastic opening tool](#) to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

Step 3 — RAM

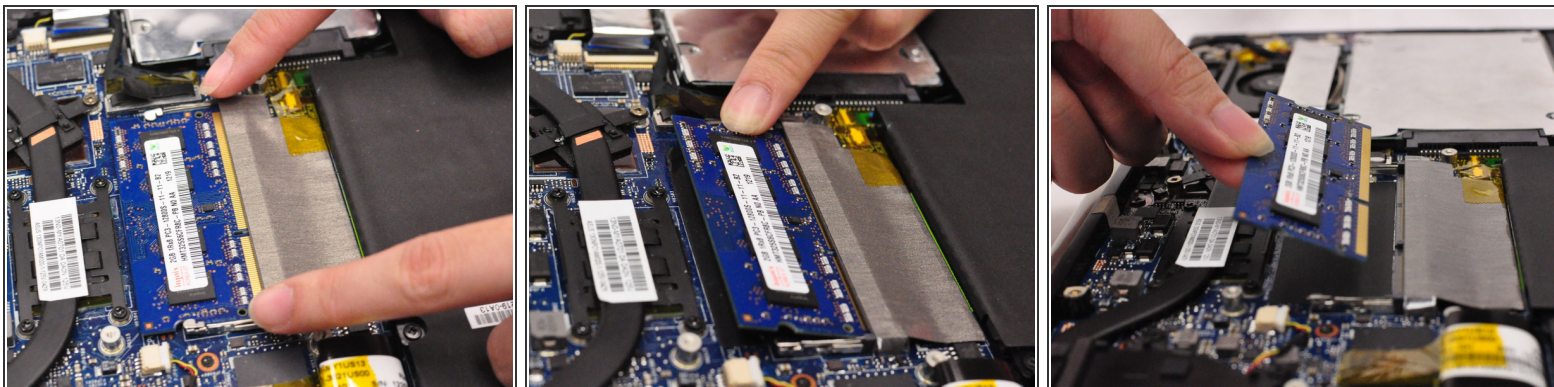

- Push away the RAM retaining arms from the RAM chip.
 - ⓘ The RAM chip will spring up once the retaining arms are pushed away from the chip.
- Remove the RAM chip completely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:30:36 AM.